


You should have:- 1 x Basin Reclining Chair, 1 x Steel Pedestal, 1 x Basin Bowl, 1 x Tilt Mechanism, 1 x Tapware Set, all bolts and fittings

How to install the Basin bowl, tilt mechanism and plug and waste

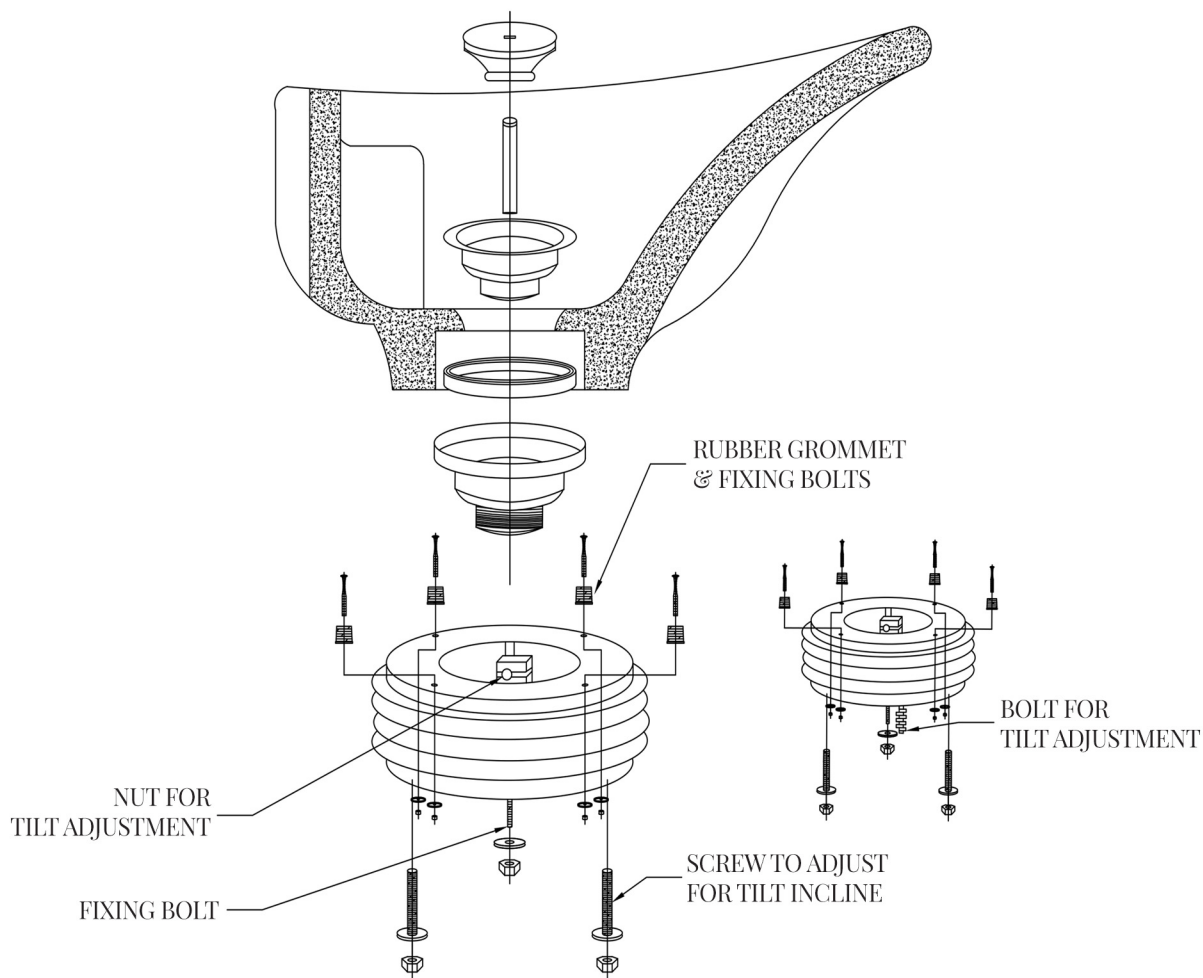

Instructions:-

Step 1: Using silicone fit the plug and waste to basin bowl

Step 2: Turn basin upside down carefully and insert the 4 bolts supplies into the black rubber grommets. Place these into the 4 holes under basin bowl.


Step 3: Fit the tilt mechanism ensuring the tilt mechanism is facing the right way as shown above. Place washer and nut over bolt and tighten all 4 holes.

Step 4: Fit the flexible hose to the plug and waste and tighten. Ensure washer is secured inside hose.

Step 5: Install the rubber cover over the tilt mechanism.


Step 6: Turn the basin over and go to Step 2 (next page)

You should have:- 1 x Basin Reclining Chair, 1 x Steel Pedestal, 1 x Basin Bowl, 1 x Tilt Mechanism, 1 x Tapware Set, all bolts and fittings

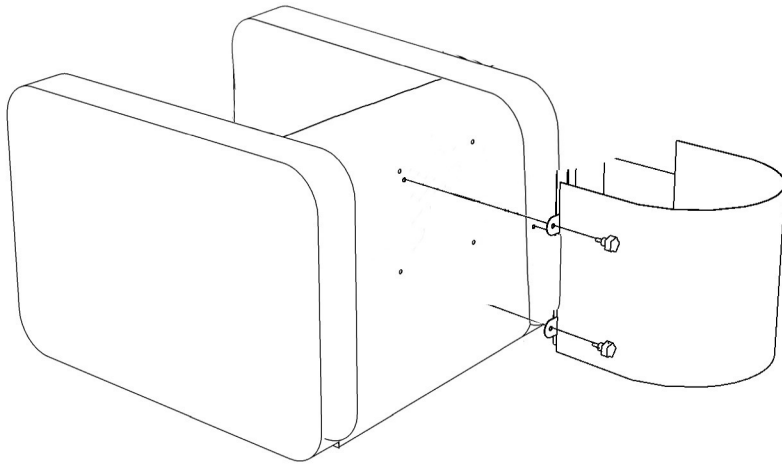

STEP 2:-

With the 4 bolts provided, screw the steel pedestal into the back of the chair.
(Note: If this is already installed, go straight to Step 3)

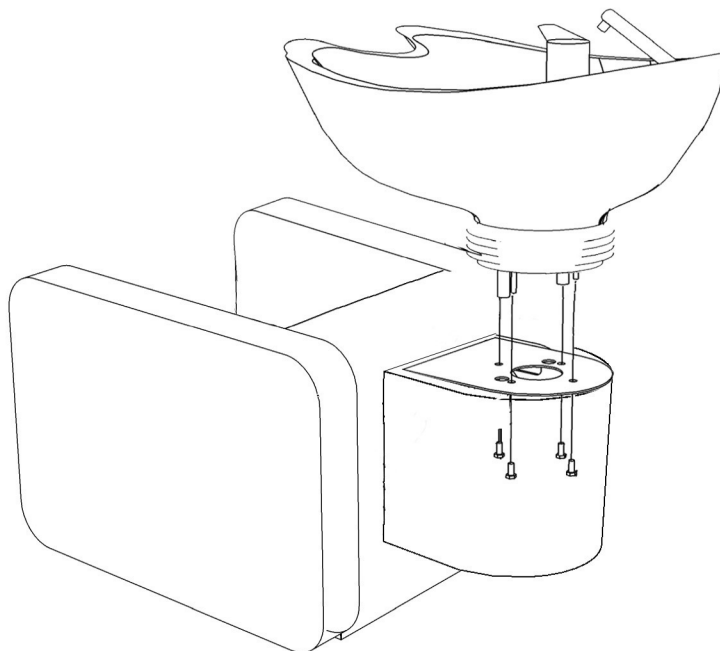

STEP 3:-

Carefully place the basin bowl and tilt through the 4 holes in pedestal.

Place your hand underneath pedestal and tighten the 2 x fixing bolts.

If required, adjust the tilting bolt and adjustment nut.

Please Read:

Australian legislation requires all fixed plumbing appliances sold by DSSE to be installed by a fully qualified licensed plumber in accordance with the regulations set out by all local & regional authorities.

Failure to comply with the above will void all warranties.